

## XBPbS - Setting up control system, Boiler system, Push button 230VAC thermostats

### SETTING UP PUSH BUTTON THERMOSTATS

The thermostat is supplied with factory default settings.



To set the clock:

- With the thermostat on, press **⏸** twice and use the **▲/▼** keys to set the minutes.
- Press **H** to accept. Use the **▲/▼** keys to set the hours. Press **H** to accept.
- Use the **▲/▼** keys to set the day. Press **A** to store and exit. The clock is now set.

### SETTING UP REMOTE SENSORS (if required)

With the unit powered up:

- Press **⏸** to turn the unit off.
- Press **⏸** for three seconds to enter programme mode.
- The small number is the feature number, the large number is the setting value.
- Scroll through to Feature 8 (sensor mode) using the **⏸** button.
- Use the **▲/▼** buttons to set sensor mode to one of
  - 01 = Remote air sensor
  - 02 = Floor sensor only
  - 03 = Internal air sensor and remote floor sensor
- Press **A** to return to normal operation, this saves your settings.



Set the floor limit temperature in the configuration options (Feature 9) to the value required by the floor covering supplier.

### Error Codes

E2: Remote sensor disconnected

**Underfloor Heating Control System**  
XBPbS - Setting up control system, Boiler system, Push button 230VAC thermostats

**Nu-Heat**  
UNDERFLOOR & RENEWABLES

Nu-Heat UK Ltd | Heathpark House | Devonshire Road  
Heathpark Industrial Estate | Honiton | Devon EX14 1SD

 Online  
[www.nu-heat.co.uk](http://www.nu-heat.co.uk)

 Phone  
01404 540745