

XBNeSr - Setting up control system, Boiler system, neoStat 230VAC thermostats with wireless network

SETTING UP NeoSTAT THERMOSTATS

The thermostat is supplied with factory default settings.



To set the clock:

- With the thermostat on, use the < > arrows to scroll to CLOCK.
- Press ✓ to confirm selection.
- Use the ^ v arrows to set the hours (24 hour format).
- Press ✓ to confirm selection.
- Use the ^ v arrows to set the minutes
- Press ✓ to confirm selection.
- Use the < > arrows to set the day.
- Press ✓ to confirm selection and return to the main display.

SETTING UP a supplementary NeoSTAT as a HOT WATER TIMER

A supplementary neoStat can be configured as a timer for domestic hot water.

To change function from THERMOSTAT to TIMER:

- With the thermostat on, use the < > arrows to scroll to SETUP.
- Press AND HOLD ✓ for 10 seconds.
- Use the < > arrows to scroll between modes:
 - MODE 1 = Thermostat
 - MODE 2 = Timer
 - (the selected option will flash)
- Press ✓ to confirm selection and return to the main display.

SETTING UP REMOTE SENSORS (if required)



- With the thermostat on, use the < > arrows to scroll to SETUP.
- Press ✓ to confirm selection.
- Use the ^ v arrows to scroll through features to reach Feature 06 (Sensor selection).
- Use the < > arrows to set the required Sensor Option:
 - 00 Built-in air sensor only
 - 01 Remote air sensor
 - 02 Remote floor sensor only (not recommended)
 - 03 Built-in air sensor and remote floor sensor
 - 04 Remote air sensor and remote floor sensor
- Press ✓ to confirm the selection.
- Use the ^ v arrows to scroll through features to reach Feature 07 (Floor temperature limit).
- Use the < > arrows to set the required floor limit temperature to the value required by the floor covering supplier.
- Press ✓ to confirm the selection.

Error Codes

- E0: The internal sensor has developed a fault.
- E1: The remote floor sensor has not been connected, is mis-wired or has developed a fault.
- E2: The remote air sensor has not been connected, is mis-wired or has developed a fault.

Underfloor Heating Control System
XBNeSr - Setting up control system, Boiler
system, neoStat 230VAC thermostats with
wireless network



Nu-Heat UK Ltd | Heathpark House | Devonshire Road
Heathpark Industrial Estate | Honiton | Devon EX14 1SD

Online
www.nu-heat.co.uk

Phone
01404 540745