

FOR HEAT PUMPS with WEATHER-COMPENSATION



SETTING UP NeoSTAT THERMOSTATS

Each thermostat is supplied with factory default settings that must be edited before the system is handed over.

- With the thermostat on, use the < > arrows to scroll to SETUP.
- Press ✓ to confirm selection.
- Use the ^ v arrows to scroll through features to feature 12 (Program mode).
- Use the < > arrows to select mode 00 (non-programmable).
- Press ✓ to confirm selection and return to the main display.

To set the clock:

- With the thermostat on, use the < > arrows to scroll to CLOCK
- Press ✓ to confirm selection.
- Use the ^ v arrows to set the hours (24 hour format).
- Press ✓ to confirm selection.
- Use the ^ v arrows to set the minutes.
- Press ✓ to confirm selection.
- Use the < > arrows to set the day.
- Press ✓ to confirm selection and return to the main display.

FOR HEAT PUMPS requiring a CALL-FOR-HEAT



SETTING UP NeoSTAT THERMOSTATS

The thermostat is supplied with factory default settings.

To set the clock:

- With the thermostat on, use the < > arrows to scroll to CLOCK
- Press ✓ to confirm selection.
- Use the ^ v arrows to set the hours (24 hour format).
- Press ✓ to confirm selection.
- Use the ^ v arrows to set the minutes.
- Press ✓ to confirm selection.
- Use the < > arrows to set the day.
- Press ✓ to confirm selection and return to the main display.

SETTING UP REMOTE SENSORS (if required)



- With the thermostat on, use the < > arrows to scroll to SETUP.
- Press ✓ to confirm selection.
- Use the ^ v arrows to scroll through features to reach Feature 06 (Sensor selection).
- Use the < > arrows to set the required Sensor Option:
  - 00 Built-in air sensor only
  - 01 Remote air sensor
  - 02 Remote floor sensor only (not recommended)
  - 03 Built-in air sensor and remote floor sensor
  - 04 Remote air sensor and remote floor sensor
- Press ✓ to confirm the selection.
- Use the ^ v arrows to scroll through features to reach Feature 07 (Floor temperature limit).
- Use the < > arrows to set the required floor limit temperature to the value required by the floor covering supplier.
- Press ✓ to confirm the selection.

Error Codes

- E0: The internal sensor has developed a fault.
- E1: The remote floor sensor has not been connected, is mis-wired or has developed a fault.
- E2: The remote air sensor has not been connected, is mis-wired or has developed a fault.

Underfloor Heating Control System  
XUHNeSr - Setting up control system, user  
supplied heat pump system, neoStat 230VAC  
thermostats with wireless network



Nu-Heat UK Ltd | Heathpark House | Devonshire Road  
Heathpark Industrial Estate | Honiton | Devon EX14 1SD

Online  
[www.nu-heat.co.uk](http://www.nu-heat.co.uk)

Phone  
01404 540745