


W1BNDS - Electrical 1st fix, Boiler system, EnergyPro cylinder(s), Dial 230VAC thermostats

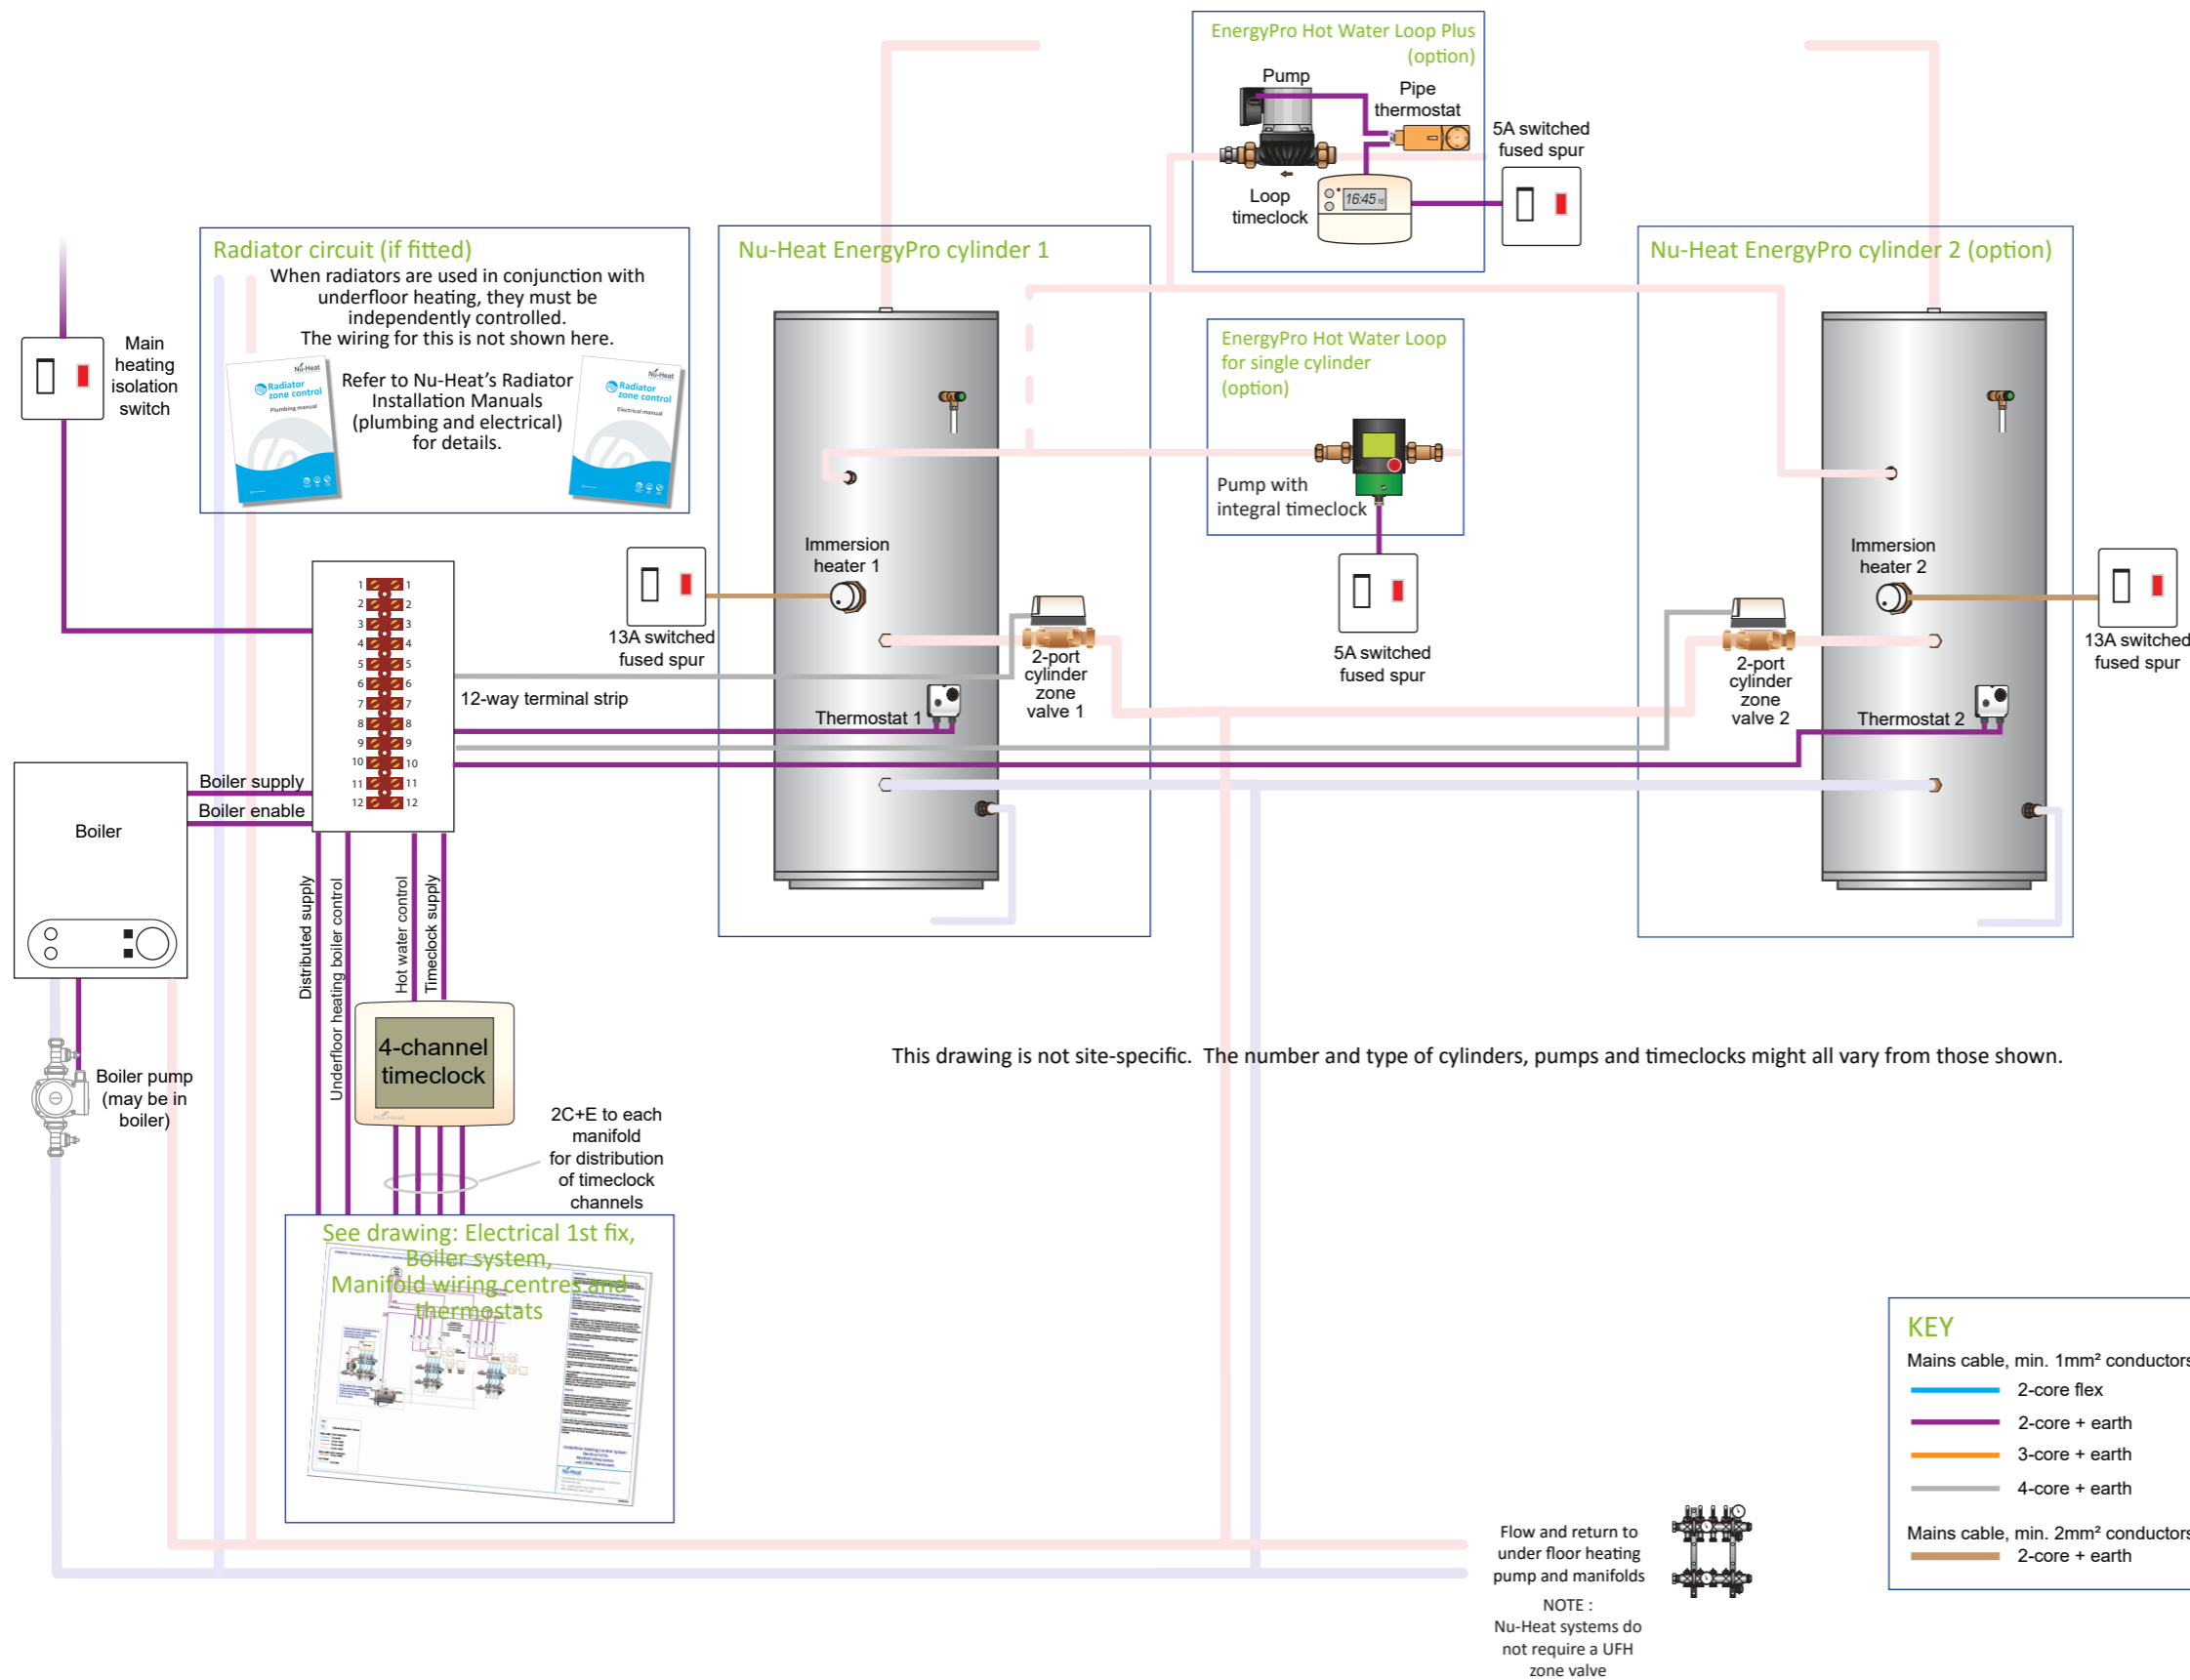

This drawing is not site-specific. The number and type of cylinders, pumps and timeclocks might all vary from those shown.

Important:

Attention to the advice given in these sheets will help to ensure a trouble free and and effective installation. The requirements of the relevant British Standards and IEE Wiring Regulations should always be met.

BS7671: 2008. Requirements for Electrical Installations, IEE Wiring Regulations, Building Regulations Electrical Safety (Part P)

Installation must be carried out by a Competent Person or, failing that, the local building control authority must be notified of the proposed work before commencement and the completed installation must be inspected by a Competent Person.

Safety

Isolation switches must be fitted where required in accordance with current regulations. Nu-Heat recommends the use of a number of 5A switched fused spurs to supply the boiler and other electrical items that make up the heating system. All fused spurs for the heating system must be from the same source.

Supplementary safety isolating switches for switched live conductors may optionally be positioned near wiring centres. These must be connected as shown.

Location of equipment

All electrical equipment should be protected from damage, water and dust during the installation/build process. Nu-Heat electrical wiring centres are designed to be fixed to walls inside the building, close to the Optiflo manifolds they control.

First Fix

The choice of the correct cabling plan depends on the type of boiler to be installed, the type of cylinder and the type and location of room thermostats. Before starting, make sure these drawings match the equipment that is actually going to be installed.

Parts shown in outline are generally supplied by others. Where connections are shown to equipment that is not supplied by Nu-Heat, this is for guidance only. In all such cases the supplier's installation information should be checked before fixing and connecting the equipment.

In line with the company policy of product development, Nu-Heat reserves the right to supply different components to those shown.

If there is any aspect of the installation that you do not understand, please contact Nu-Heat Technical, quoting your QR (system reference) number.

The information on these pages is the copyright of Nu-Heat. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means electronic, mechanical, photocopying, recording or otherwise without prior written permission of Nu-Heat.

This drawing is not site-specific. The number and type of cylinders, pumps and timeclocks might all vary from those shown.

Underfloor Heating Control System W1BNDS - Electrical 1st fix, Boiler system, EnergyPro cylinder(s), Dial 230VAC thermostats



Nu-Heat UK Ltd | Heathpark House | Devonshire Road
Heathpark Industrial Estate | Honiton | Devon EX14 1SD

Online www.nu-heat.co.uk Phone 01404 540745

Installing a new complete underfloor heating system

New installations should always use the S Plan control system based on 2-port zone valves and a 12 way terminal strip.

Extending an existing heating system and fitting an EnergyPro cylinder

If you are extending your existing heating system and fitting an EnergyPro cylinder, you must ensure that the heating controls are S Plan. The control valve(s) are usually located near the boiler or existing hot water cylinder. If your existing control system is W Plan or Y Plan, based on a 3-port zone valve, you must convert it to S Plan based on 2-port zone valves (radiator zone valve not supplied) and a 12-way terminal strip.